

Air Pressure Relieving Lift Chair Spare Parts List

S13437	Transformer box	
S16503	Power cord from transformer to wall socket	
S30881	Power cord from actuator to transformer	
S308880	Hand control	
S308882	Backrest bracket (each)	
S308883	Base mechanism (for small and medium size)	
S308885	Backrest actuator	
S308886	Seat/Legrest actuator	



Air Pressure Relieving Lift Chair Spare Parts List

S308887	Backrest wings (pair, small)	
S308888	Backrest wings (pair, medium)	
S308889	Backrest wings (pair, large)	
S308890	Backrest cushion with cover (small, air bladder not included)	and the second s
S308891	Backrest cushion with cover (medium, air bladder not included)	
S308892	Backrest cushion with cover (large, air bladder not included)	
S308893	Seat cushion with cover (small, air bladder not included)	
S308894	Seat cushion with cover (medium, air bladder not included)	



Air Pressure Relieving Lift Chair Spare Parts List

S308895	Seat cushion with cover (large, air bladder not included)	
S308896	Seat air bladder (hand pump included)	
S308897	Headrest & lumbar air bladders with connecting tube (hand pump not included)	
S308898	Hand pump with tube	
S308899	Y connector (for connecting air bladders to hand pump)	Y
S308900	Side wing brackets (screws included)	
S310072	Rear castor (with brake)	
S308901	Front castor	