 
 


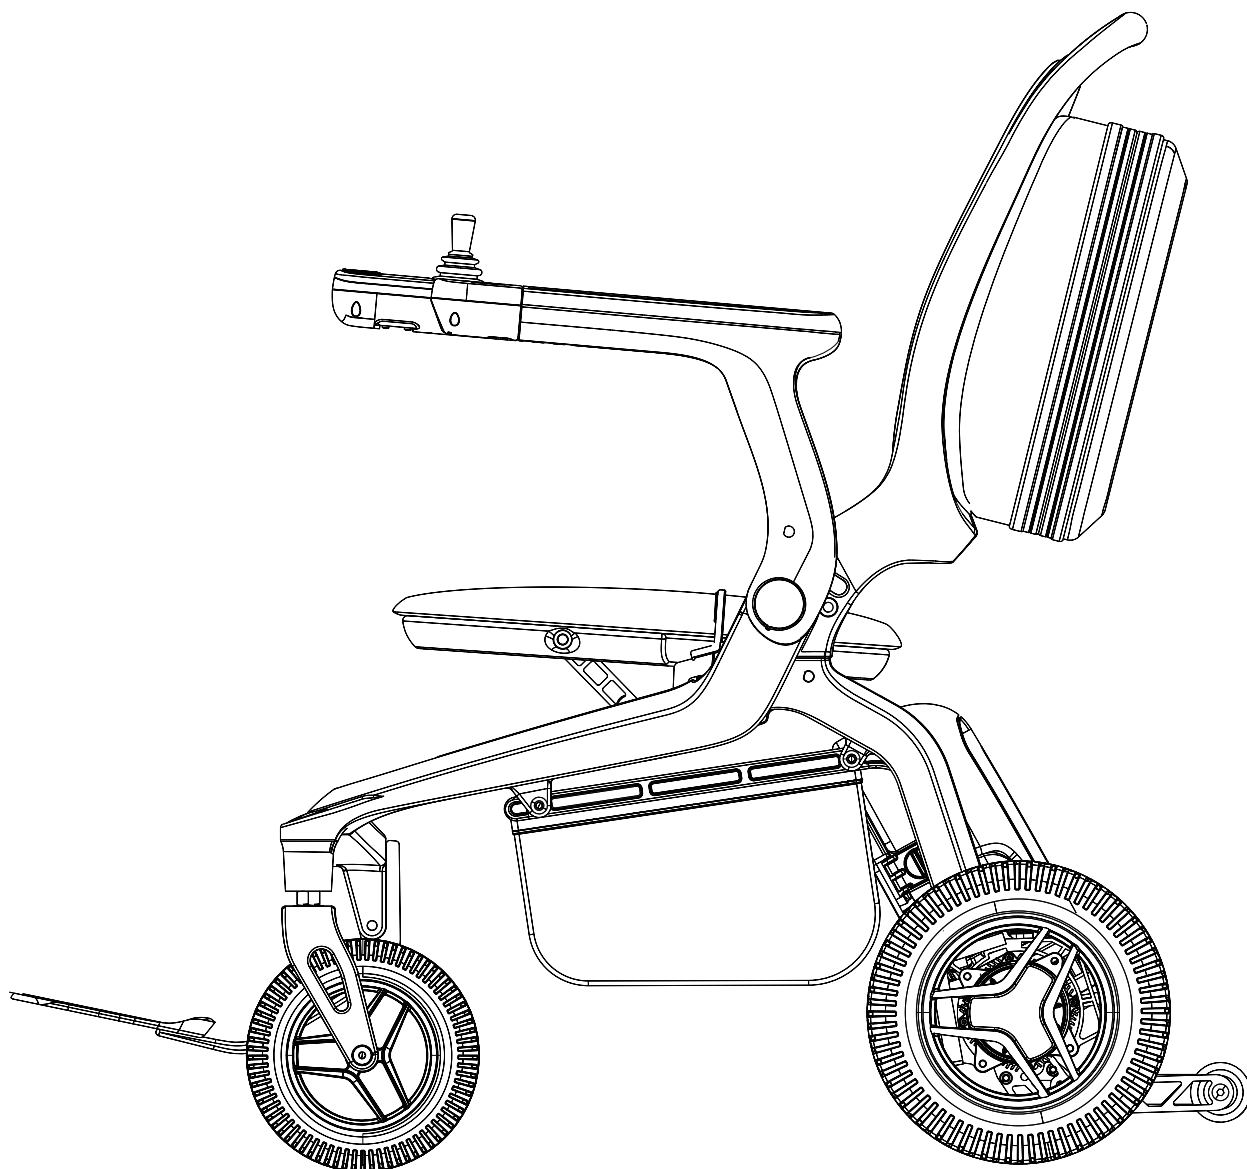





S343901 Replacement Part - Royale Robooter
Joystick Assembly For E40/E60
-A/E60-Pro-A Each

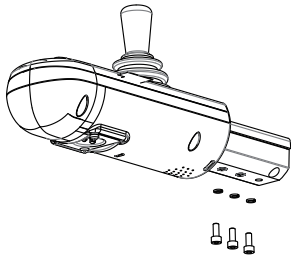

 
S343903 Replacement Part - Royale Robooter
Joystick Knob For E40/E60
-A/E60-Pro-A/E80 Each



 
S343904 Replacement Part - Royale Robooter
Joystick Veneer Upholstery Cover RHS/LHS
For E40/E60-A/E60-Pro-A Each

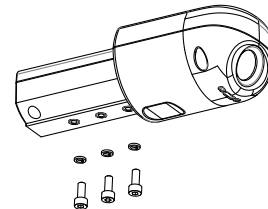

 
S343870 Replacement Part - Royale Robooter
Armrest w/Light Assembly For E40/E60
-A/E60-Pro-A/E80 Each

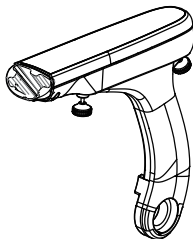

 
S343854 Replacement Part - Royale Robooter
Adjustable Armrest Assembly LHS
For E60-A/E60-Pro-A Each

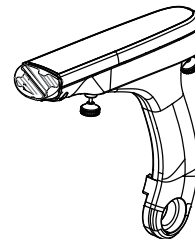

 
S343855 Replacement Part - Royale Robooter
Adjustable Armrest Assembly RHS
For E60-A/E60-Pro-A Each

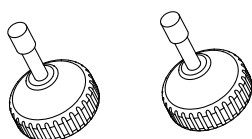

 
S343909 Replacement Part - Royale Robooter
M5 Screws For Adjustable Armrest
For E60-A/E60-Pro-A (Pair)



 
S343869 Replacement Part - Royale Robooter
Armrest Top Cover Only For E40/E60
-A/E60-Pro-A Each

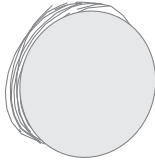

 
S343865 Replacement Part - Royale Robooter
Armrest LHS Round Cap Cover For
E60-A/E60-Pro-A Each

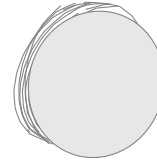

 
S343868 Replacement Part - Royale Robooter
Armrest RHS Round Cap Cover For
E60-A/E60-Pro-A Each

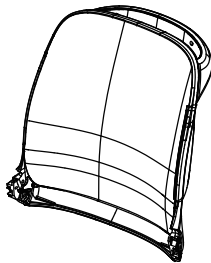

 
S343874 Replacement Part - Royale Robooter
Backrest Assembly (Without Backpack)
For E60-A/E60-Pro-A Each

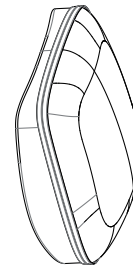

 
S343840 Replacement Accessory - Royale
Robooter Backpack For E40/E60
-A/E60-Pro-A Each

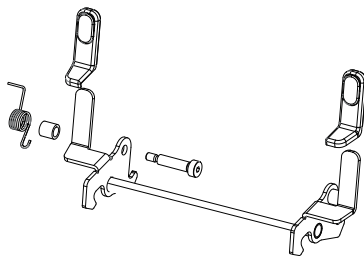

 
S343884 Replacement Part - Royale Robooter
Folding Lever Mechanism Assembly
For E40/E60-A/E60-Pro-A/E80 Each

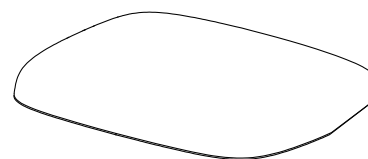

 
S343937 Replacement Part - Royale Robooter
Seat Cushion For E40/E60
-A/E60-Pro-A Each

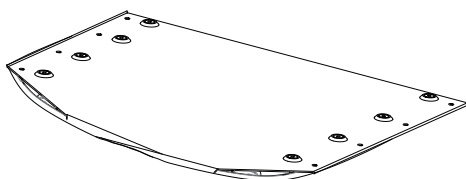

 
S343936 Replacement Part - Royale Robooter
Seat Canvas Assembly For E40/E60
-A/E60-Pro-A/E80 Each

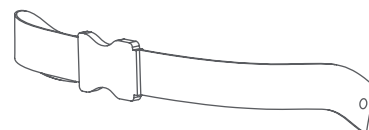

 
S343844 Replacement Accessory - Royale
Robooter Seat Belt Assembly For
E40/E60-A/E60-Pro-A/E80 Each

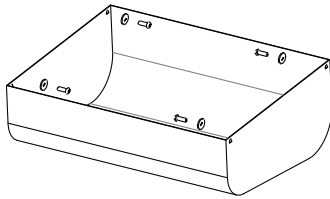

 
S343846 Replacement Accessory - Royale Robooter Storage Basket For E60-A/E60-Pro-A Each

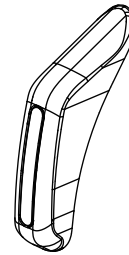

 S343939 Replacement Accessory - Royale Robooter Seat Tail Light LHS For E60-A/E60-Pro-A Each

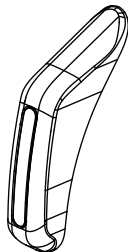

 
S343940 Replacement Accessory - Royale Robooter Seat Tail Light RHS For E60-A/E60-Pro-A Each

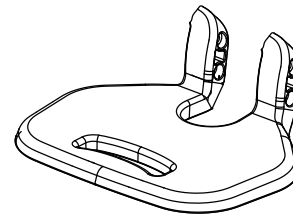

S343888 Replacement Accessory - Royale Footplate Assembly For E60-A/E60-Pro-A Each



 
S343916 Replacement Part - Royale Robooter Omni Front 10" Wheel Assembly Black For E60-A Each

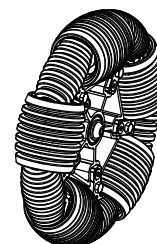

S343918 Replacement Part - Royale Robooter Omni Front 12" Wheel Assembly Black For E60-Pro-A Each



 S343917 Replacement Part - Royale Robooter Omni Front 10" Wheel Trim Cover For E60-A Each

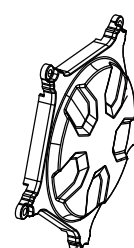

S343919 Replacement Part - Royale Robooter Omni Front 12" Wheel Trim Cover For E60-Pro-A Each



 
S343890 Replacement Part - Royale Robooter
Front Fender LHS 10" For E60-A Each




S343891 Replacement Part - Royale Robooter
Front Fender LHS 12" For E60-Pro-A Each




S343892 Replacement Part - Royale Robooter
Front Fender RHS 10" For E60-A Each

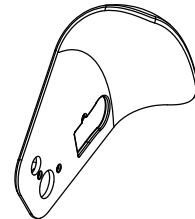

 S343893 Replacement Part - Royale Robooter
Front Fender RHS 12" For E60-Pro-A Each

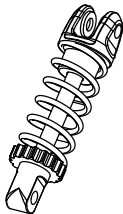

 S343899 Replacement Part - Royale Robooter
Front Suspension Shock Spring 10"
For E60-A Each

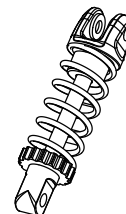


S343900 Replacement Part - Royale Robooter
Front Suspension Shock Spring 12"
For E60-Pro-A Each




S343921 Replacement Part - Royale Robooter
Pneumatic Rear 10" Tyre Assembly
LHS For E40/E60-A Each



 
S343923 Replacement Part - Royale Robooter
Pneumatic Rear 10" Tyre Assembly
RHS For E40/E60-A Each

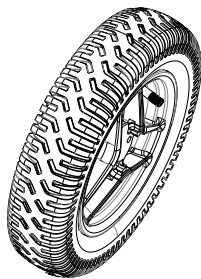

 S343926 Replacement Part - Royale Robooter
Pneumatic Rear 12" Tyre Assembly
RHS/LHS For E60-Pro-A Each

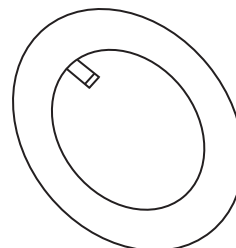

 S344207 Replacement Part - Royale Robooter
Pneumatic Rear 10" Tube Only For
E40/E60-A Each

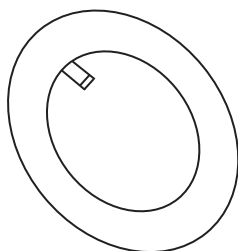


S344209 Replacement Part - Royale Robooter
Pneumatic Rear 12" Tube Only For
E60-Pro-A Each




S344210 Replacement Part - Royale Robooter
Pneumatic Rear 10" Tyre Only For
E40/E60-A Each



 
S344212 Replacement Part - Royale Robooter
Pneumatic Rear 12" Tyre Only For
E60-Pro-A Each

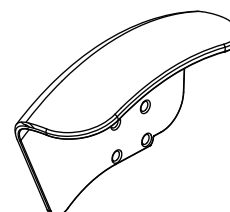

 
S343930 Replacement Part - Royale Robooter
Rear Fender LHS For E60-A/E60
-Pro-A Each

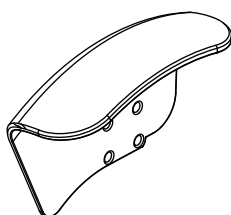

 
S343931 Replacement Part - Royale Robooter
Rear Fender RHS For E60-A/E60
-Pro-A Each

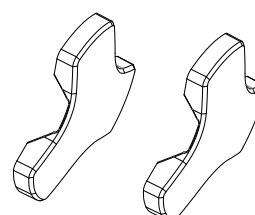

 
S343925 Replacement Part - Royale Robooter
Pneumatic Rear 10" Tyre Hubcap For
E60-A Each (Pair)

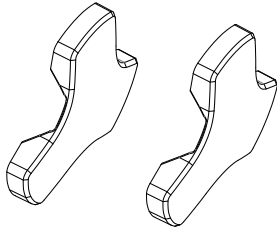

 
S343927 Replacement Part - Royale Robooter
Pneumatic Rear 12" Tyre Hubcap For
E60-Pro-A Each (Pair)

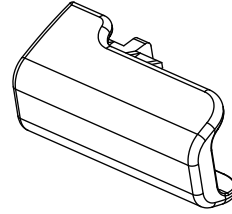

 
S343932 Replacement Part - Royale Robooter
Rear Manual Drive Locking Lever Red
For E40/E60-A/E60-Pro-A/E80 Each

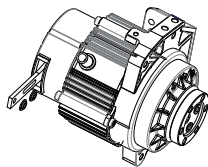

 
S343911 Replacement Part - Royale Robooter
Motor Assembly LHS For E60-A/E60
-Pro-A Each

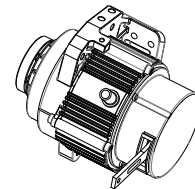

 
S343914 Replacement Part - Royale Robooter
Motor Assembly RHS For E60-A/E60
-Pro-A Each

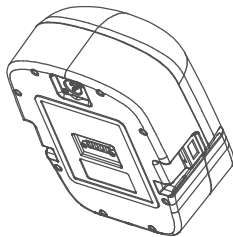

 
S343851 Replacement Part - Royale Robooter
24V20AH Battery For E40/E60-A/E60
-Pro-A/E80 Each

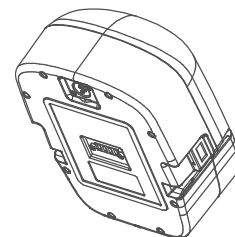

 
S343852 Replacement Part - Royale Robooter
24V25AH Battery For E40/E60-A/E60
-Pro-A/E80 Each

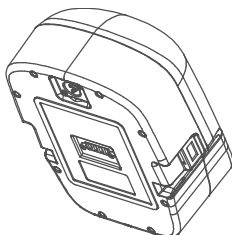

 
S343850 Replacement Part - Royale Robooter
24V12AH Battery For E40/E60-A/E60
-Pro-A/E80 Each

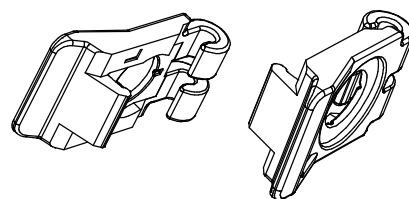

 
S343878 Replacement Part - Royale Robooter
Battery Locking Clip For E40/E60
-A/E60-Pro-A/E80 (Pair)

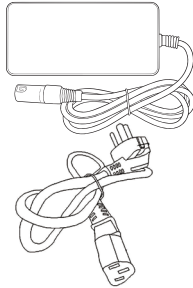

 
S343847 Replacement Charger - Royale Robooter
Universal 4AH Charger For
E60-A/E60-Pro-A Each

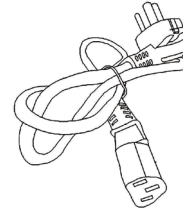

 
S343879 Replacement Part - Royale Robooter
Charging Cable For AU Wall Socket
For E40/E60-A/E60-Pro-A/E80 Each

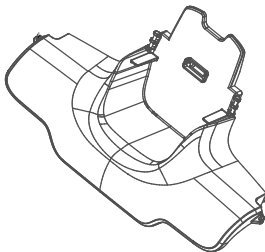

 
S343929 Replacement Part - Royale Robooter
Rear Black Shroud Assembly For
E60-A/E60-Pro-A Each

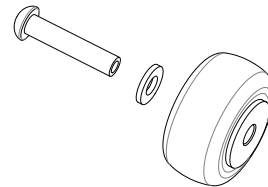

 
S343848 Replacement Part - Royale Robooter
22" Anti-Tip Wheel w/Screws For
E40/E60-A/E60-Pro-A Each

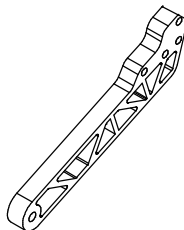

 
S343856 Replacement Part - Royale Robooter
Anti-Tip Bar (Without Wheel)
For E40/E60-A Each

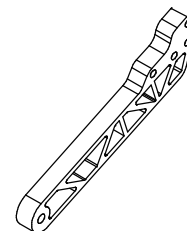

 
S343857 Replacement Part - Royale Robooter
Anti-Tip Bar (Without Wheel)
For E60-Pro-A Each

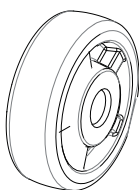

 
S343885 Replacement Part - Royale Robooter
Folding Roller Wheel LHS For
E40/E60-A/E60-Pro-A/E80 Each

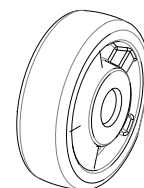

 
S343886 Replacement Part - Royale Robooter
Folding Roller Wheel RHS For
E40/E60-A/E60-Pro-A/E80 Each

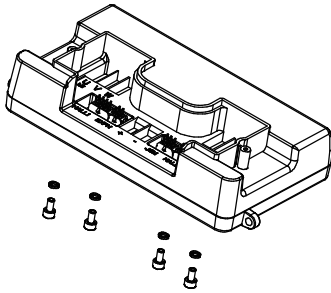

 
S343880 Replacement Part - Royale Robooter
Control Box For E40/E60-A/E60

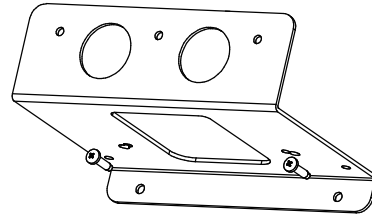

 
S343882 Replacement Part - Royale Robooter
Control Box Mounting Plate For
E40/E60-A/E60-Pro-A Each

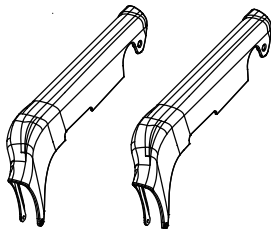

 
S343897 Replacement Part - Royale Robooter
Front RHS/LHS Green Shroud Set
For E60-Pro-A (Pair)

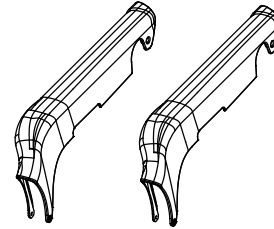

 
S343898 Replacement Part - Royale Robooter
Front RHS/LHS Grey Shroud Set
For E60-A (Pair)

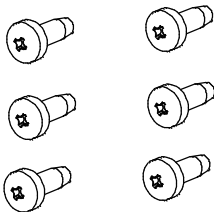

 S343906 Replacement Part - Royale Robooter
M3x8 Screws For E40/E60-A/E60
-Pro-A/E80 (Pack of 6)

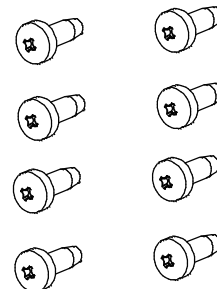

 S343907 Replacement Part - Royale Robooter
M4x12 Screws For E40/E60
-A/E60-Pro-A/E80 Each(Pack of 8)

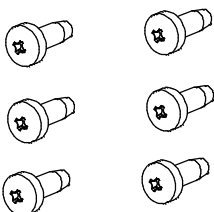

S343908 Replacement Part - Royale Robooter
M4x16 Screws For E40/E60
-A/E60-Pro-A/E80 (Pack of 6)



Spare Parts List For E60 Powerchair Range

S343877 Replacement Part - Royale Robooter Battery Connection Cable For E40/E60-A/E60-Pro-A/E80 Each

S343941 Replacement Part - Royale Robooter Upper and Lower Control Connection Cable RHS/LHS
Dual Control Assembly For E40/E60-A/E60-Pro-A/E80 Each

S343871 Replacement Part - Royale Robooter Backrest Adjustment Kit LHS For E60-A/E60-Pro-A Each

S343872 Replacement Part - Royale Robooter Backrest Adjustment Kit RHS For E60-A/E60-Pro-A Each
